



GAS SPRUNG MECHANIC'S SEAT

MODEL NO: **SCR10.V2 and SCR15**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

1. SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this seat.
- Locate seat in a suitable working area.
- WARNING!** Use the seat on level and solid ground, preferably concrete.
- Keep the seat clean and tidy in accordance with good workshop practice.
- DO NOT** use the seat for any purpose other than that for which it is designed.
- DO NOT** stand on the seat.
- DO NOT** use the seat outdoors.
- DO NOT** get the seat wet or use in damp or wet locations or areas where there is condensation.
- DO NOT** clean the seat with any solvents which may damage the paint surface or the protective coating on the padded seat.
- DO NOT** exceed maximum capacity of 136kg.

2. INTRODUCTION

Swivel action seat with lever operated gas sprung height adjustment between 380mm and 500mm. Padded cushion for added comfort. Seat glides across workshop floor on five Ø60mm ball bearing castors. Base doubles as temporary tool and component storage tray.

3. SPECIFICATION

Model No:	SCR10	SCR15
Max. Capacity	136kg	136kg
Minimum Height:	380mm	380mm
Maximum Height:	500mm	500mm
Gas Strut Nitrogen approximate quantity	3g	3g

4. ASSEMBLY



- 4.1. If the 5 swivel castors, 5 domed head nuts and 5 plain washers are not fitted, invert the seat on to a non-scratch clean surface and fit the five castors.
- 4.2. If the swivel castors are fitted, check the fixings for tightness and tighten if necessary.

5. OPERATION

- 5.1. To lower: sit lightly on the stool and lift the operating lever; the stool will lower until the lever is released.
- 5.2. To raise: remove weight from seat. Lifting the operating lever will allow the seat to raise.

6. MAINTENANCE

- 6.1. If in constant use, check the tightness of the domed head nuts on a quarterly basis.
- 6.2. Smear the castor bearings and the gas cylinder rod with a thin film of silicone grease annually.
- 6.3. The castor wheels are maintenance free; ensure they are able to rotate and swivel freely.
- 6.4. Clean the seat cushion and trays with a moist cloth and mild detergent.

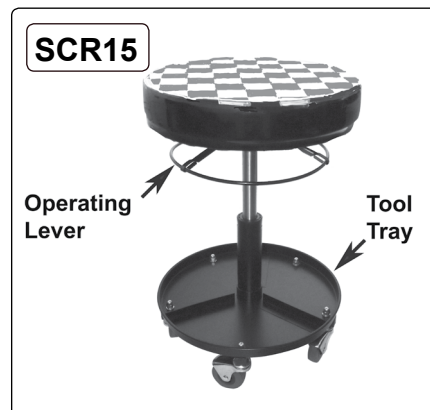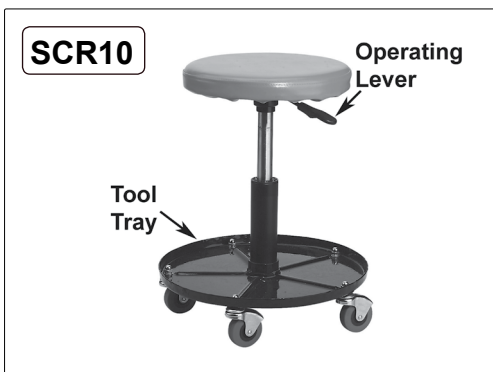

Parts support is available for this product. To obtain parts, please log on to www.sealey.co.uk, email sales@sealey.co.uk or telephone 01284 757500

ENVIRONMENT PROTECTION



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk